



Ejector Foot

Code: DP



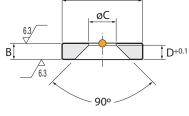

øΑ

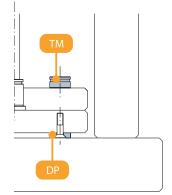

This unit is fixed through both ejector plates in conjunction with the spacer discs to provide support to the plates. These are fixed to the ejector plates so eliminating machining in the back plates. Easy installation by using just one screw.

Order	Α	В	С	D
DP.200506	20	5	6.5	3.5
DP.250508	25	5	8.5	4.4
DP.280610	28	6	12	5.5

ø22


≤60N

Cad Insertion Point

Magnetic Safety Stopper

Code: TM



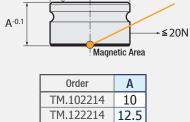


TM.152214

TM.202214

15

20

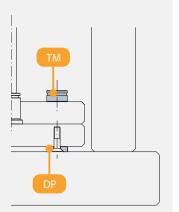


This is a safety stop to prevent the actuation of the ejector bases. It can be easily removed to release the grip on the pins when required.



Code: TA



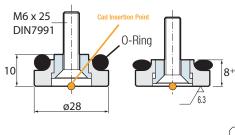

Used to minimize the vibrations caused by the ejector plates returning to position. The main advantage is the increase in the life of parts within the ejector frame through the reduction of damage and wear.


Order: TA.280806


Mounting Flange

Code: **G110**



Support washer & Guide pillar fixation

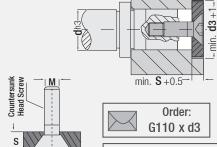

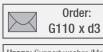

Usage: Support washer (Mould) Guide pillar fixation (Die) ★ It can also be used to * Reliable product used for guide pillar with centre collar support for ejector plates in injection moulds / etc. mountings min. d3 + 1

Ø	Pillar Diameter	Flange	Screw	
d3	d	S	M	
22	Ø 15 / 16			
25	Ø 19 / 20	5.5 mm		
32	Ø 24 / 25			
40	Ø 32 / 30	7.5	M8 x 20	
50	Ø 38 / 40	0.5		
60	Ø 48 / 50	9.5 mm		
73	Ø 60 / 63			
93	Ø 80	12	M12 x 20	