


Circlip

Code: G112



G02-G03-G04-G05
G06-G07-G09-G20
It is used with above guide pillars.

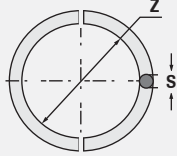

Pillar	z	s
Ø 25	22.5	2.5
Ø 32	28	4
Ø 40	36	4
Ø 50	46	4
Ø 63	57	6
Ø 80	74	6
Ø 100	94	6




Order: G112. Pillar



Square Flange for Guide Pillar

Reference: CNOMO
Reference: PSA

Code: G119

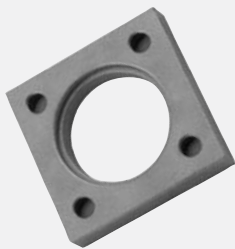

G03
G04
G05
It is used with above guide pillars.

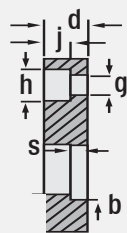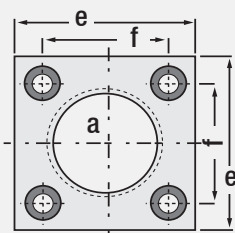

a Pillar	b	d	e	f	g	h	j	s
25	28	10	45	31	6.6	11	7	2.7
32	37	10	56	36	6.6	11	7	4.2
40	45	12	70	50	6.6	11	7	4.2
50	55	14	80	55	9	16	9	4.2
63	70	18	100	70	11	18	11	6.2
80	87	20	110	80	13	22	14	6.2
100	107	20	140	100	13	22	14	6.2



Order: G119. a (pillar)

Code: G03

a h5	l mm	b	l1 mm	l2 mm	l3 mm	k	r
25	100	22.3	25	8	8	2.7	2
	125						
	140						
	160						
	180						
	200						
32	125	27.8	32	10	12	4.2	2
	140						
	160						
	180						
	200						
	224						
40	180	35.8	63	12	12	4.2	2
	200						
	224						
	250						
	280						
	315						
50	200	45.8	80	16	12	4.2	2.5
	224						
	250						
	280						
	315						
	355						
63	250	56.8	100	16	18	6.2	2.5
	280						
	315						
	355						
	400						
	450						
80	315	73.8	125	16	18	6.2	3
	355						
	400						
	450						
	500						
	100						
400							
450							
500							




Order: G03. a x l



Guide Pillar

Reference: CNOMO

Code: G03

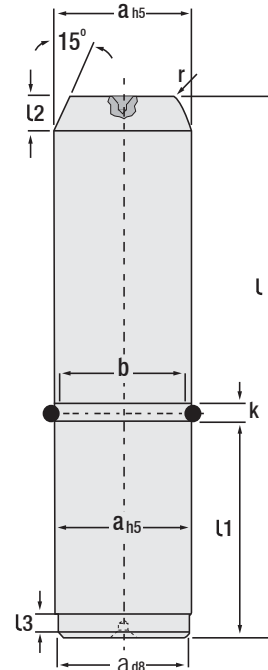


Bush Clamp

Code: G102E

Reference: CNOMO

Order Example:
G102E.40

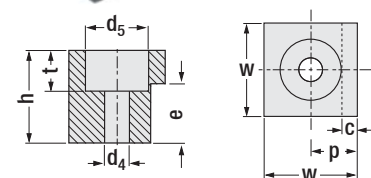

Bush	w	p	h	e	c	t	d ₄	d ₅
Ø 40	18	9.5	12	8	3	7	6.6	11
Ø 50	22	12	16	10	4	9	9	15
Ø 63	26	15	20	12	5	11	11	18
Ø 80	26	15	25	16	5	11	11	18
Ø 100	26	15	32	20	5	11	11	18



Automotive Standards **RENAULT**